


Attach BC 90 top connector to structure. See TRACKLOK® design guide for details

Cut 64mm(min) generic steel studs to length required, (refer to plenum height chart for details) fix to supplied brackets with 10 gauge tek screws

Attach BC 45 top connector to structure. See TRACKLOK® design guide for details

Attach base unit to partition head with No 6 x 10 gauge tek screws

Typical Gypsum Wallboard

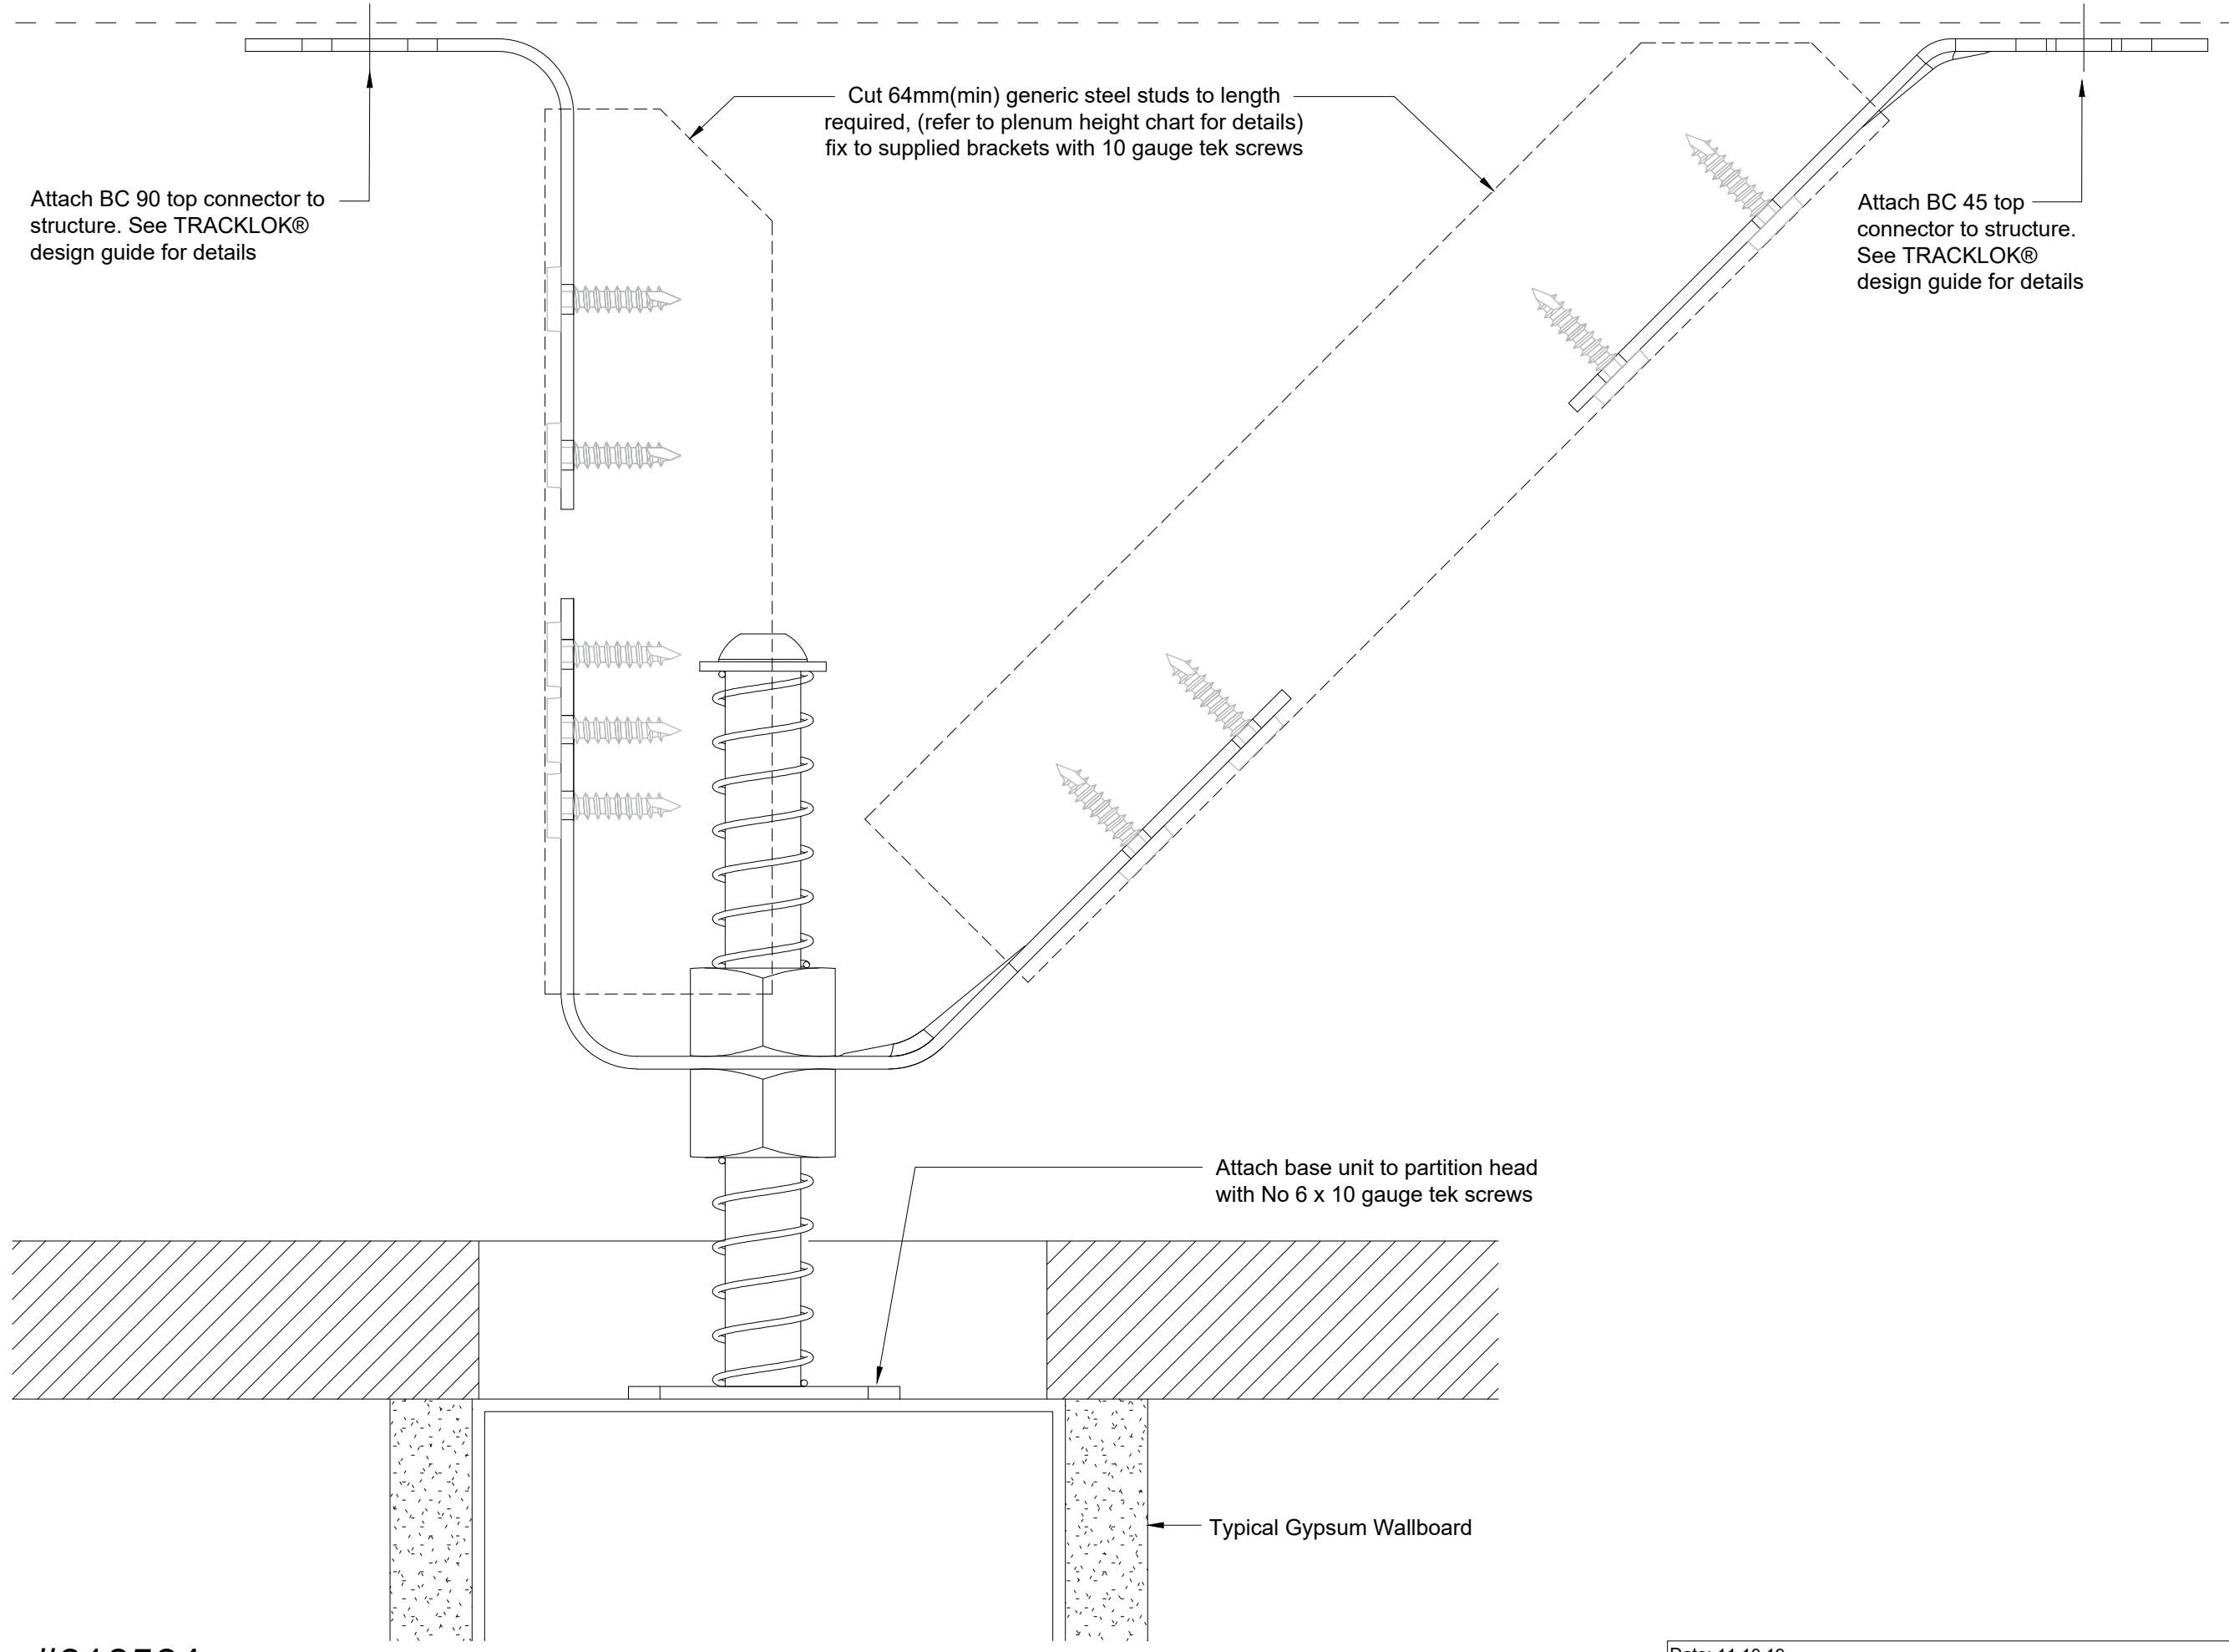

© NZ Pat App#616564



Remove all burrs and sharp edges. Original Size A3. Do not scale from drawing.

Material : Galvanised Steel / G3313 SECC
Finish: Assembled

Description: Deflok - Vert - Retro - Neutral

Date: 11.10.19			
Revision Description: For Information			
Part: DEFLOK-VERT-RETRO-NEUTRAL			
DrawnBy: HSC	Drawing: 0001	Scale: 1:1	Part Revision: A